
# Assembly Instructions

## 1.Component List

Identify all components are present prior to installation.

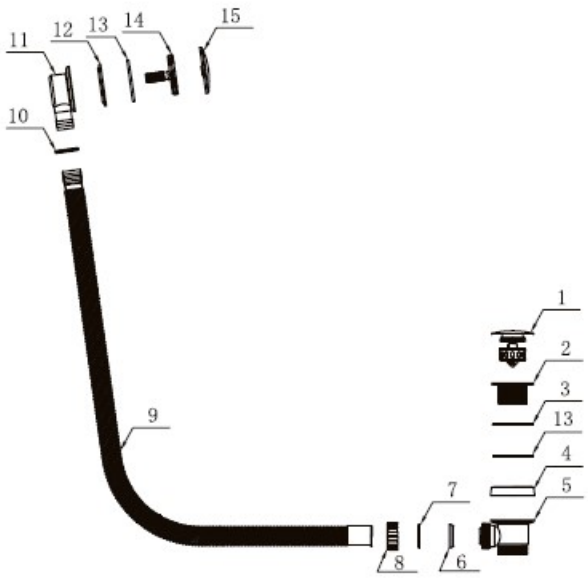


| | | |
|---|---|---|
| 1. Cover | x1 |
| 2. Flange | x1 |
| 3. Washer | x1 |
| 4. Washer | x1 |
| 5. Waste outlet | x1 |
| 6. Rubber seal | x1 |
| 7. Plastic spacer | x1 |
| 8. Plastic nut | x1 |
| 9. Plastic pipe | x1 |
| 10. Clamp | x1 |
| 11. Overflow body | x1 |
| 12. Flat washer -overflow | x1 |
| 13. Washer | x2 |
| 14. Lock nut | x1 |
| 15. Overflow cover | x1 |

## 2. Installation steps

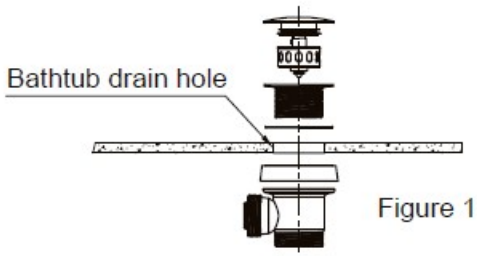



Figure 1

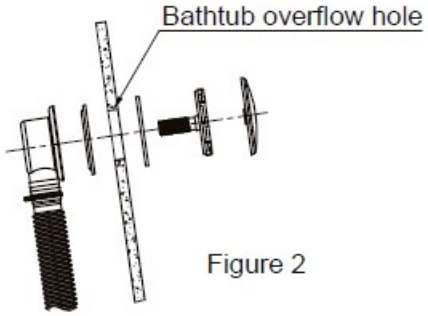



Figure 2

①. Pass the flange(2) through the washer(3),drain hole of the bathtub and the washer(4) in sequence, then lock it onto the waste outlet(5). Finally place the cover(1) inside the flange(2). (As Figure 1 showed )

②. Pass the lock nut(13) through the washer(13), the bathtub overflow hole and the flat washer-overflow(12) in sequence, and lock it onto the overflow body(11). Finally, install the overflow cover(15) into the lock nut(14).(As Figure 2 showed)


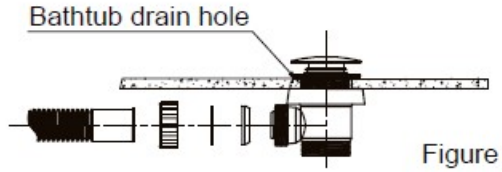



Figure 3

③. Pass the plastic pipe(9) through the plastic nut(8), plastic spacer(7) and rubber seal(6) in sequence, and lock it onto the waste outlet(5) to complete the installation. (As Figure 3 showed)

④. Filler the bathtub with water, check all joints for leaks.

## 3. Installation complete drawing

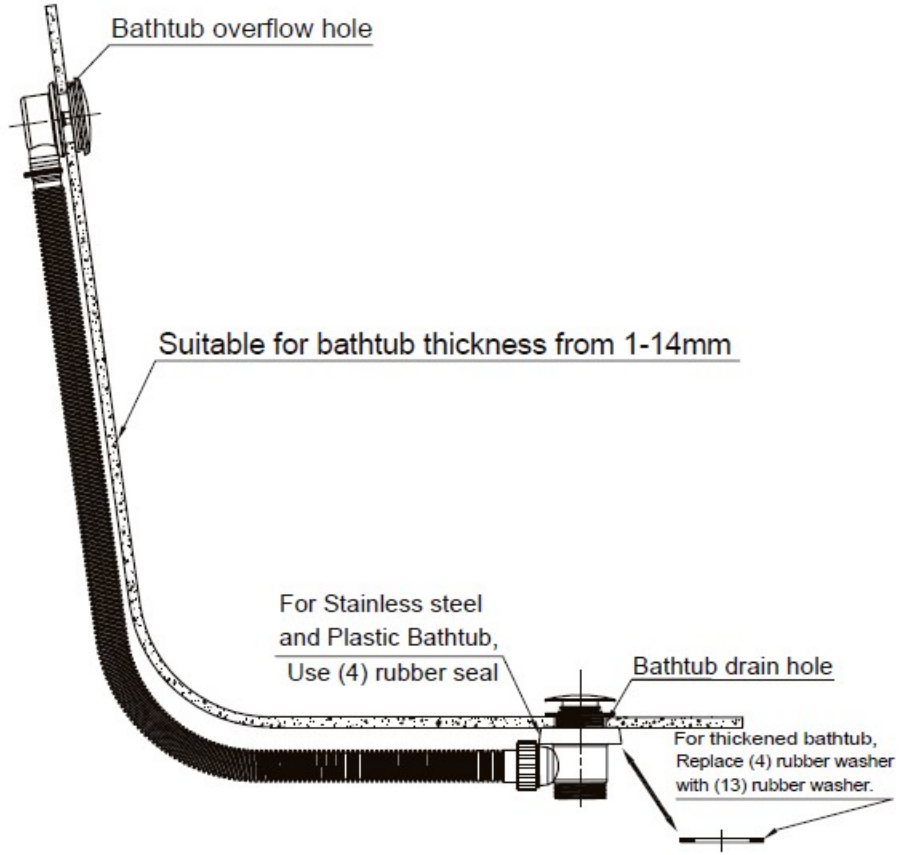

5.31027-00 PRIORITY Слив-перелив Round, Click-Clack, латунь/пластик, L=600мм, хром (265553)

5.31027-BN PRIORITY Слив-перелив Round, Click-Clack, латунь/пластик, L=600мм, браш.никель (265554)

5.31027-31 PRIORITY Слив-перелив Round, Click-Clack, латунь/пластик, L=600мм, черн.мат (265555)


5.31027-MG PRIORITY Слив-перелив Round, Click-Clack, латунь/пластик, L=600мм, графит браш (323761)

5.31027-GB PRIORITY Слив-перелив Round, Click-Clack, латунь/пластик, L=600мм,браш.золото (330542)

**ВНИМАНИЕ! Для ванн с толщиной борта 1-14мм.**

**Для ванн из композитных материалов, с толщиной до 14 мм в районе слива - используем «тонкую» прокладку №13**

**Для акриловых и стальных ванн - используем «толстую» прокладку №4:**

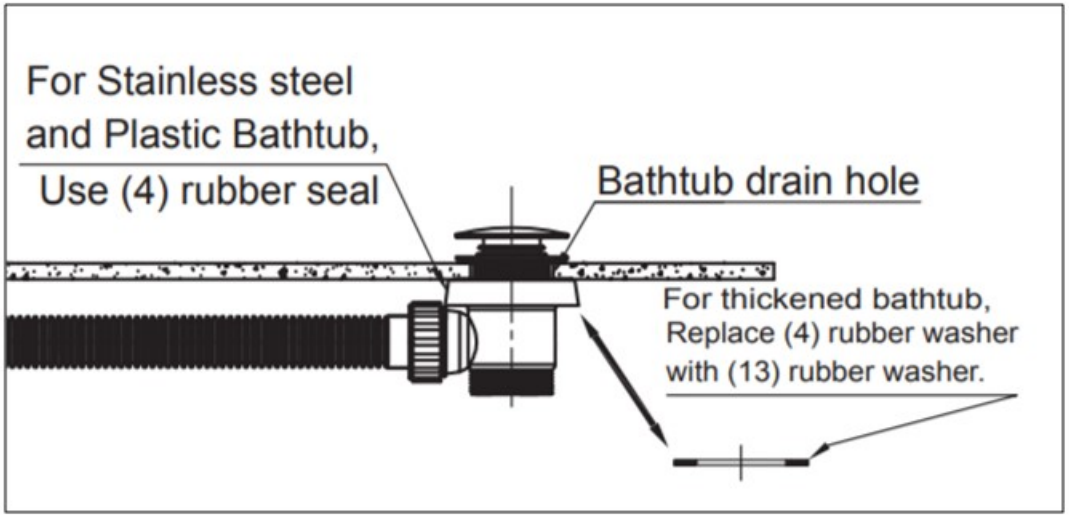


# PRIORITY

