
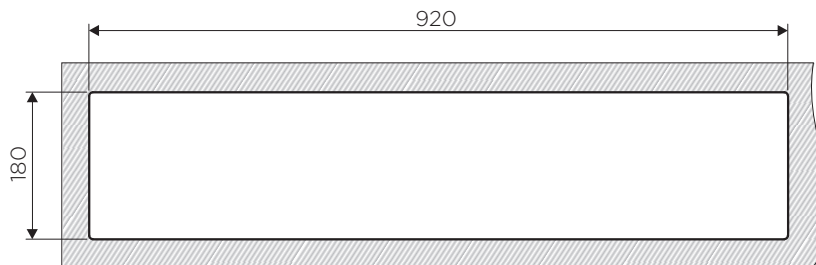
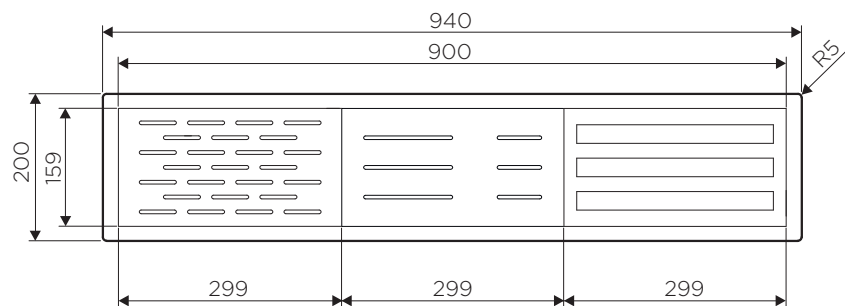
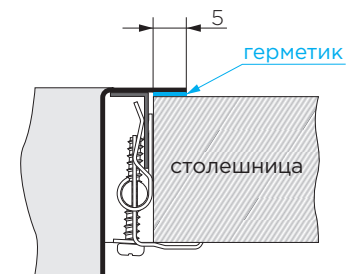


DRY-02

Stainless steel

DRY-02-IN 4999019
 DRY-02-LG 4999021
 DRY-02-GM 4999020





Врезной монтаж

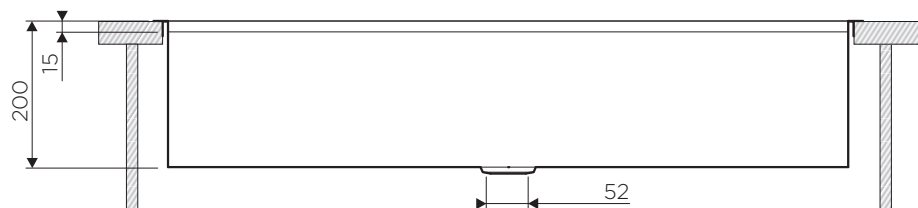

DRY-02
Stainless steel

DRY-02-IN 4999019
DRY-02-LG 4999021
DRY-02-GM 4999020





Монтаж вровень со столешницей

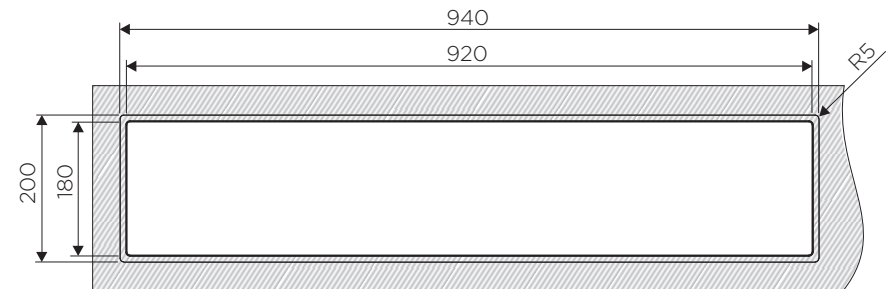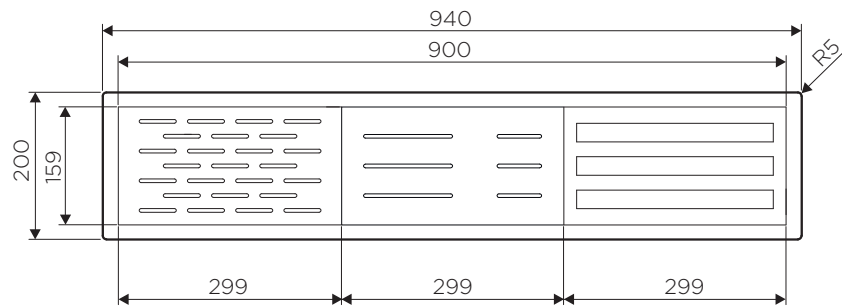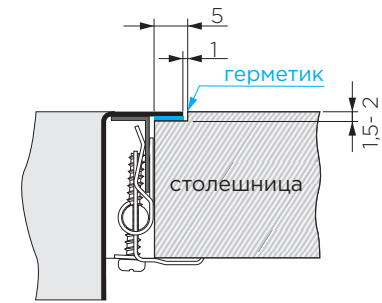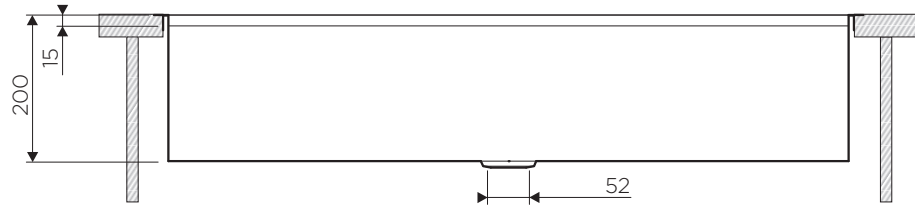

DRY-02
Stainless steel

DRY-02-IN 4999019
DRY-02-LG 4999021
DRY-02-GM 4999020

Монтаж под столешницу

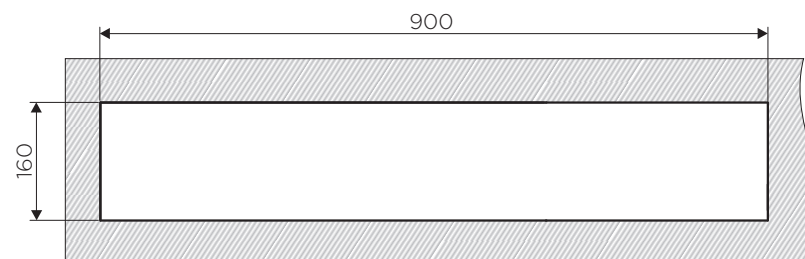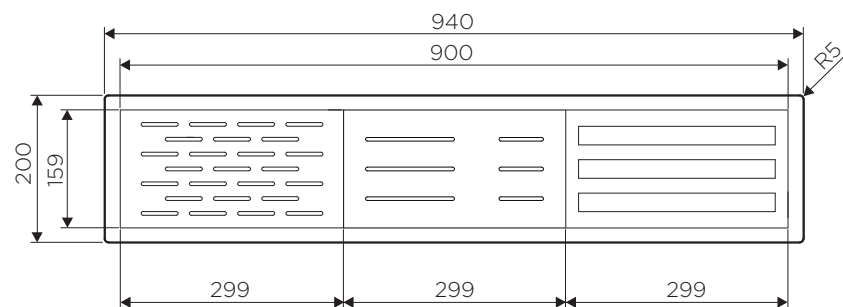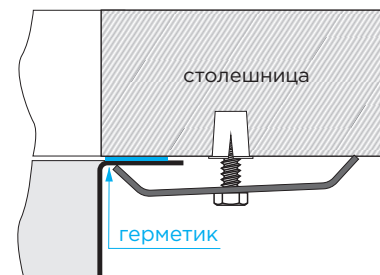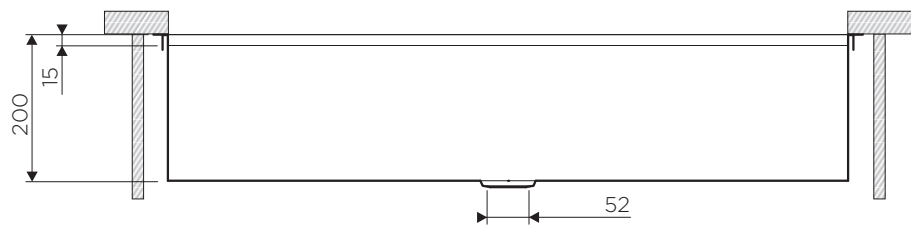

DRY-02
Stainless steel

DRY-02-IN 4999019
DRY-02-LG 4999021
DRY-02-GM 4999020